



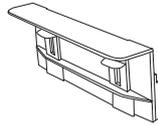


**⚠ ATTENTION:** Read the instructions prior to installation.

#### Components:

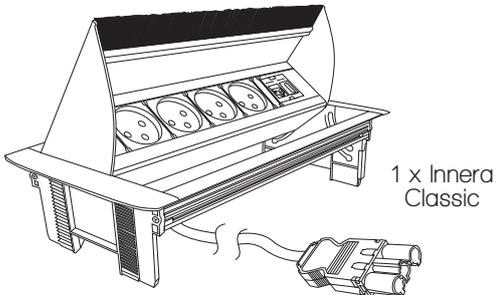


#### Tools required:

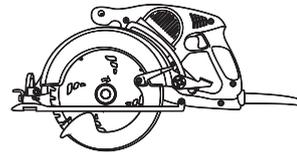


#### Critical safety information:

- Prior of use, please examine and verify that the product is not defected. Please do not install or operate if there is a defect of any kind.
- If in any case you are facing misunderstanding of installation procedure, the installation should be carried out by certified electrician
- Make sure you are installing the product on smooth straight surface. Do not install in any case that the surface is not straight or if there are levels differences.
- Make sure water will not penetrate into the unit. In any case please make sure you are installing the unit, where proper leakage protection device is connected.


#### Installation:

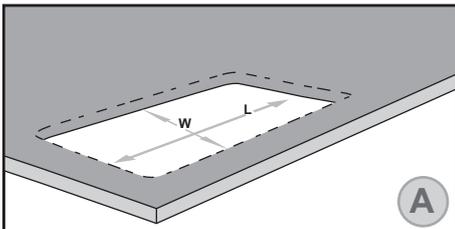


Drill hole into the surface according to the INSTALLATION TABLE on page 2. Please verify your purchased item's model No and drill the hole according to the model's cutout dimensions.

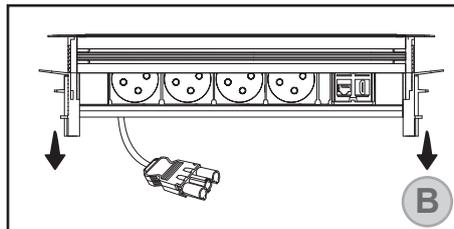


Remove the locking Handles by pulling & Pushing it down the rail before you are Inserting the Innera Classic into the hole.

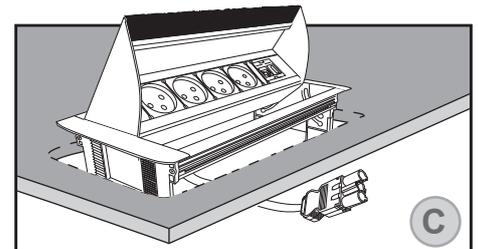


Insert the Innera Classic into the hole.

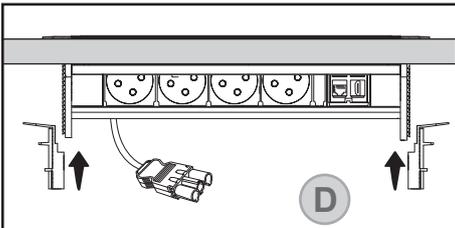


Tight the locking handles by install it on the rails and push it up to the surface.

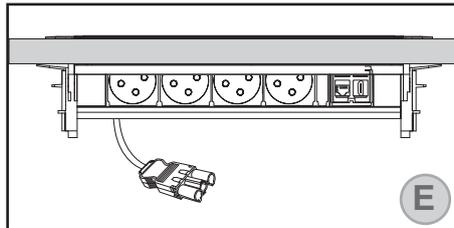


Tight the handles strongly to the surface and verify the Innera Classic is firmed and cannot be rotated.

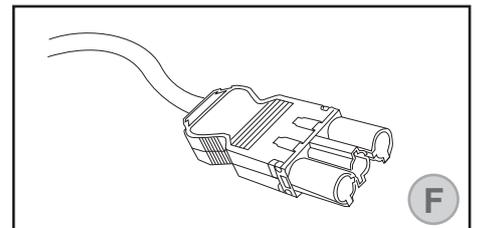


Connect the GST Male connector to power and the Innera Classic is ready for use.

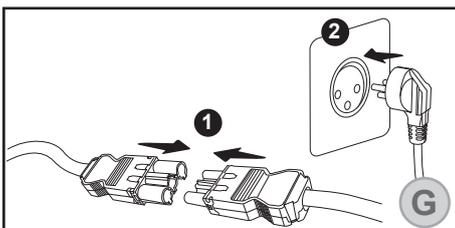

REMARK: In case you need to connect the Innera Classic to a standard socket, you should buy a **starter cable** separately which not included in this Kit and connect it according to illustration above.

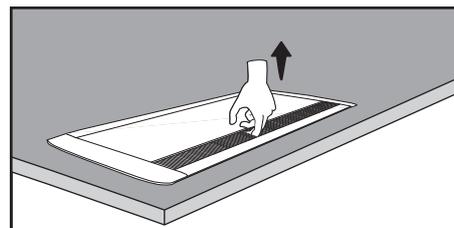



For use, turn the cover by pulling it up with a hand.

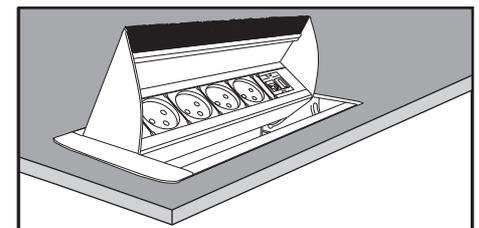

The Innera Classic is ready for use.

#### Cleaning:

The product can be cleaned by a soft and dry fabric. Please do not use moisture, abrasives materials, solvents or any detergents which can be conductive

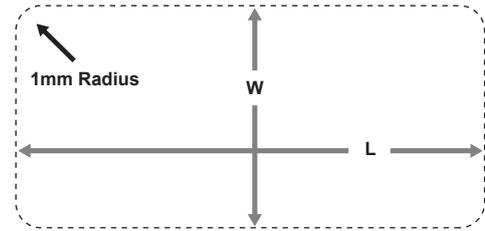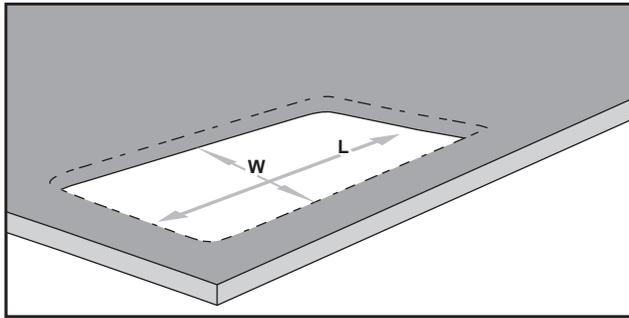

#### INSTALLATION TABLE:

Catalog No	Model	Description	Cutout Hole	
			Length mm (L)	Width mm (W)
0769978897769	IC-33	3 IL sockets	192	140
0769978897776	IC-32	2 IL sockets & 2 Keystones	200.5	140
0769978897783	IC-44	4 IL sockets	234	140
0769978897790	IC-43	3 IL sockets & 2 Keystones	244	140
0769978897813	IC-55	5 IL sockets	278	140
0769978897820	IC-54	4 IL sockets & 2 Keystones	287	140
0769978897837	IC-53	3 IL sockets & 4 Keystones	287	140
0769978897844	IC-52	2 IL sockets & 6 Keystones	287	140
0726811931653	IC-52C	2 IL sockets, 2.4A USBx2 Charge, 4 Keystones	287	140
0769978897851	IC-66	6 IL sockets	320	140
0769978897868	IC-65	5 IL sockets & 2 Keystones	329.5	140
0769978897875	IC-64	4 IL sockets & 4 Keystones	329.5	140
0726811931684	IC-73	3 IL sockets & 8 Keystones	373	140
0769978897905	IC-88	8 IL sockets	406	140
0769978897912	IC-87	7 IL sockets & 2 Keystones	415.5	140
0769978897929	IC-86	6 IL sockets & 4 Keystones	415.5	140
0726811931707	IC-1004	4 IL sockets & 12 Keystones	501.5	140